

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

AUTOMATIC JAR OPENER



USER MANUAL

Model no.: KC04

PLEASE READ AND SAVE THIS
USE AND CARE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using your Jar Opener.
- Close supervision is necessary when your Jar Opener is used by or near children.
- Avoid contact with any of the jar opener moving parts during operation. Keep hands, hair, jewelry, clothing, as well as spatulas and other utensils away from the jar opener moving parts during operation to prevent injury, and / or damage to the unit.

BATTERIES

- Make sure the motor has stopped completely before removing the batteries cover to replace batteries and before cleaning.
- While replacing batteries, **DO NOT** press the switch on the top of the Jar Opener to avoid turning the unit on.
- Always replace all batteries at the same time and never mix old and new batteries or batteries of different type or quality.

OPERATION


- This Jar Opener is suitable to open regular and vacuum-style glass screw-top jars and intended for household use only. Any other use is not recommended.
- **DO NOT** use the Jar Opener on plastic jars.
- **DO NOT** use the Jar Opener to open jar lids smaller than 1.3 inch (32mm) or bigger than 4 inches (101mm) in diameter.
- **DO NOT** use the Jar Opener to open jar body smaller than 0.8 inch (21mm) or bigger than 3.7 inches (95mm) in diameter.
- **DO NOT** use the Jar Opener to open jars with steep curves, or irregular shapes where the jaws grip.
- **DO NOT** use the Jar Opener if there are any signs of defects on the jar lid or chipped glass around the jar.
- Always place the jar on flat non-slippery surface.
- Remove any safety seal on the jar before using the Jar Opener.
- To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener with your other hand.

CARE

- To clean the Jar Opener wipe it with a clean, damp, soft cloth. Do not use abrasive cleaners of any kind to clean the Jar Opener. **DO NOT** immerse the Jar Opener in water or any other liquids, as this may cause damage to the product.

SAVE THESE INSTRUCTIONS


Parts

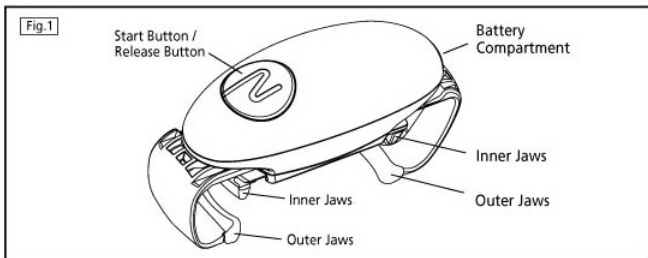

Getting Started

BATTERY INSTALLATION



1. Slide to the left the battery cover at the end of the Jar Opener and insert 2 AA alkaline or rechargeable batteries into the battery compartment according to the polarity (+/-). (see Fig.2)
2. Replace the battery cover after the batteries have been installed. Always replace batteries at the same time and never mix old and new batteries or batteries of different type or quality.

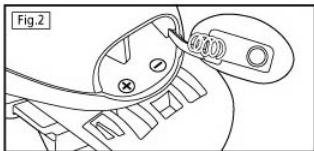

Note: The Jar Opener will not operate when the battery cover is removed from the unit.

USING THE ONE TOUCH JAR OPENER

1. Remove the paper or plastic neckband seals from jars.
2. Move the rubber grip of the Outer Jaws all the way down. (see Fig.3)
3. With the jar on a flat, non slippery surface, place the Jar Opener evenly on the top of the jar. (see Fig.4)
4. Press fully and hold the main button. The outer jaws will first move in. Release your finger from the button when the outer jaws pause and inner jaws start to move. (see Fig.4)

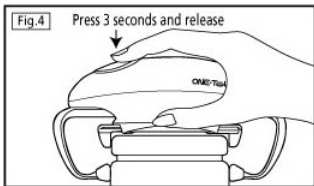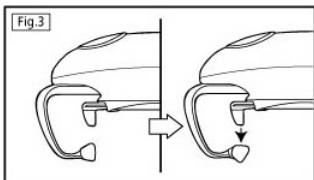

Note: **DO NOT** put your fingers near or in the Jaws during the operation process. In case you want to cease the operation, press the main button once to reset the Jar Opener. Avoid contact with any of the jar opener moving parts during operation. Keep hands, hair, jewelry, clothing, as well as spatulas and other utensils away from the jar opener moving parts during operation to prevent injury, and / or damage to the unit.

- The inner jaws will grip the jar lid and then the outer jaws will resume their movement to hold the jar securely. Then the inner jaw will rotate 1/2 turn to open the jar lid.
 - After opening the lid, the Jaws of the Jar Opener will return to their original position and stop automatically.
- Note:** To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener with your other hand. Let the Jar Opener rotate until the lid is open.
- When the Jar Opener switches off, lift the Jar Opener off the jar. Always ensure that the lid is completely unscrewed from the jar by holding the jar with one hand while removing the lid with the other hand.
 - To re-open a jar that has been stored in the refrigerator, wipe the moisture from the lid and the jar before using the Jar Opener. (Any moisture or condensation on the jar may cause the Jar Opener Jaws to slip.)

Cleaning and Care

- Wipe surfaces with a clean, damp, soft cloth.
- DO NOT use abrasive cleaners of any kind to clean the Jar Opener.
- DO NOT immerse the Jar Opener in water or any other liquids, as this may cause damage to the product.

Trouble Shooting

Problem	Solution
Jaws cannot grip the jar tight enough and opener slips during operation	Use a dry cloth to clean the Lid, jar/bottle and the Jar Opener's rubber grips
The Jar Opener lifts up when opening a jar.	Press the main button fully for one second during the operation to release the Jar Opener and reset to its original position

Specification

Jar lid opening size range: diameter 1.3" - 4" (32mm - 101mm)
 Jar body opening size range: diameter 0.8" - 3.7" (21mm - 95mm)

Disposal

The packaging material can be recycled. Please dispose of it in an environmentally friendly manner and take it to a recycling centre.



If you wish to dispose of this equipment at any point, please also do so in an environmentally friendly manner. It should not be disposed of alongside general household waste. Instead, please take it to recycling point for electrical goods. Your local council will be able to advise you further.

Batteries should not be thrown away in household waste. Please ensure that you always dispose of batteries and rechargeable batteries only when they are empty. Your local council will be able to advise you further.